




Z16

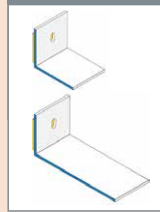


# APU®

PROFILES FOR COMPOUND HEAT INSULATION SYSTEMS

## Mounting bracket

For W66 and W67

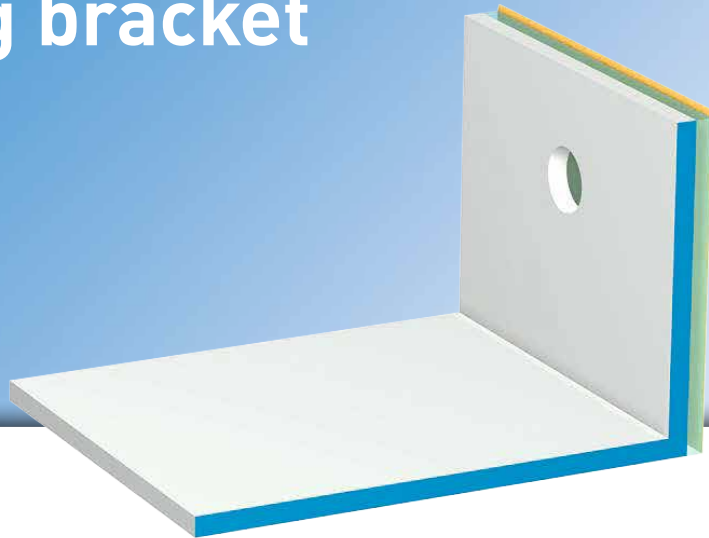


The **APU mounting brackets** are used around the base as an installation aid for the wall insulation.

If the perimeter insulation is being fitted retrospectively, the wall insulation panels must be placed onto the self-adhesive mounting brackets (2 brackets per running metre).

The bracket is available in 2 different projections (60 mm and 120 mm).



Z16

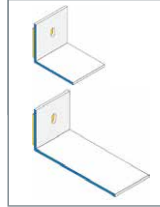

## Design

	ITEM NO.	PACKAGING UNIT	WEIGHT (per PU)
--	----------	----------------	-----------------

### Mounting bracket

Z16			
60 mm	<b>Z16-0060</b>	100 units · 4 bags in a box	3.2 kg
120 mm	<b>Z16-0120</b>	100 units · 4 bags in a box	3.5 kg

## Features

	MOUNTING BRACKET	
Material	■ Rigid PVC manufactured under DIN-16941	
Suitable for	W66-0	SOKA-TEX-ZERO base edge profile
	W66-1	SOKA-TEX-UNO base edge profile
	W66-2	SOKA-TEX-DUE base edge profile
	W66-4	SOKA-TEX-QUATTRO base edge profile
	W67-2	SOKA-FIX-DUE base edge profile

## Important information

Other applications	Any applications not clearly described in the documents may be implemented only after consultation with the plaster or ETICS manufacturer.
Perimeter insulation	For installation with no perimeter insulation ▶ see Z20 product documents

For information on materials, areas of use, tests and correct application, please refer to our 'General Advice and Information'